

# BECKEN

[you can trust]



## ***Baby Food and Bottle Warmer***

*Calentador de Biberones e Comida  
Aquecedor de Biberões e Comida*



INSTRUCTIONS MANUAL

MANUAL DE INSTRUCCIONES

MANUAL DE INSTRUÇÕES

BBFW-3014

Dear client,

Thank you for purchasing this product.

The quality of this appliance has been certified by several laboratory tests. This instructions manual is provided to simplify the use of the appliance as well as to guarantee a safe use.

Please read carefully the instructions and safety measures described in this manual.



We sincerely hope you will be satisfied when using your new appliance.

## INDEX

<b>1. SAFETY INSTRUCTIONS</b>	<b>4</b>
1.1. Power Supply	5
1.2. Power Cord and Other Cables	5
1.3. Humidity and Water	5
1.4. Cleaning	5
1.5. General Precautions	6
<b>2. OPERATING INSTRUCTIONS</b>	<b>6</b>
2.1. Product Description	6
2.2. Using the Product	7
2.3. Maintenance	13
2.4. Troubleshooting	13
<b>3. TECHNICAL SPECIFICATIONS</b>	<b>13</b>
<b>4. POST-SALE SERVICE</b>	<b>14</b>
<b>5. ENVIRONMENTAL PROTECTION</b>	<b>14</b>

# BECKEN

## 1. SAFETY INSTRUCTIONS

	<b>WARNING</b>	
	RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>Warning:</b> to avoid the risk of electric shock, do not remove the cover. The interior does not contain any parts that can be repaired by the user. Ask for assistance from qualified personnel.		

### ***Important Warnings***

Before using your appliance read this instructions manual carefully and keep it in a safe place as you may need to consult it in the future.

Before turning on your appliance, and to ensure a safe and correct operation, do not use if:

- It has fallen to the ground;
- You notice any evidence of damage;
- Any anomaly occurs during its operation.

To avoid hazards or deterioration of your appliance through incorrect use it is advisable to read these instructions thoroughly.

Your appliance may not be used for other purposes than the ones intended and solely for household use. Any damage resulting from using the appliance outside this scope, any incorrect use, as well as any manual modifications to the product will not be covered and automatically voids the warranty.

### ***Assistance***

In case of malfunction, take your appliance to a qualified technician for assistance.

This appliance can be used by children from the age of 8 and by people with reduced physical, sensorial or mental capabilities and/or lack of experience and knowledge if they have been given instructions on using the appliance safely and if they understand the hazards involved. Children may not play with the appliance. Cleaning and maintenance must not be carried out by children without supervision.

These instructions are also available at [www.suporteworten.pt](http://www.suporteworten.pt)

### **1.1. Power Supply**

Make sure the main voltage is compatible with the appliance's. If this is not the case please consult the Customer Support Service.

### **1.2. Power Cord and Other Cables**

Do not tangle the cord or pull it to disconnect the appliance. Also, keep the cord away from warm surfaces.

Never use the appliance if it has a damaged cable or socket.

Take it to the Technical Support Service for replacement.

### **1.3. Humidity and Water**

Do not use your appliance in humid places. Do not allow the appliance to become wet under any circumstances as this may be dangerous. To avoid fire hazard or electric shock do not expose your appliance to humidity or water. Furthermore, do not place your appliance under water (e.g. for cleaning).

### **1.4. Cleaning**

Before cleaning, be sure to switch off the appliance and remove the plug from the main power supply. Always allow the unit to cool down before cleaning.

To clean the exterior of the product use a dry soft cloth only.

 
# BECKEN

## 1.5. General Precautions

- Please follow the instructions in the user manual which help to properly install and operate this product and enjoy its advanced features. Please keep the instructions for future reference.
- Read all instructions before using the product.
- Maintenance and service operations are only to be carried out by authorized professionals.
- Any damage caused by manual modifications to the product is not covered by the warranty.
- If this product is used for other purposes than the ones originally intended, or if it is not correctly connected, the product may become damaged and the warranty will be voided.

## 2. OPERATING INSTRUCTIONS


### 2.1. Product Description

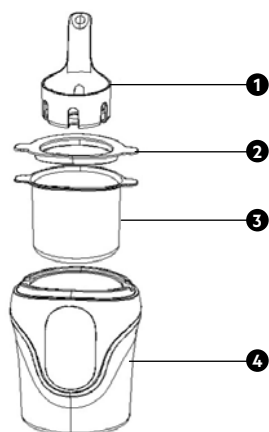


- ❶ Basket for baby food jars and food cans
- ❷ Adapter ring
- ❸ Basket for bottles
- ❹ Body of the warmer

## 2.2. Using the Product
  
### Control panel description

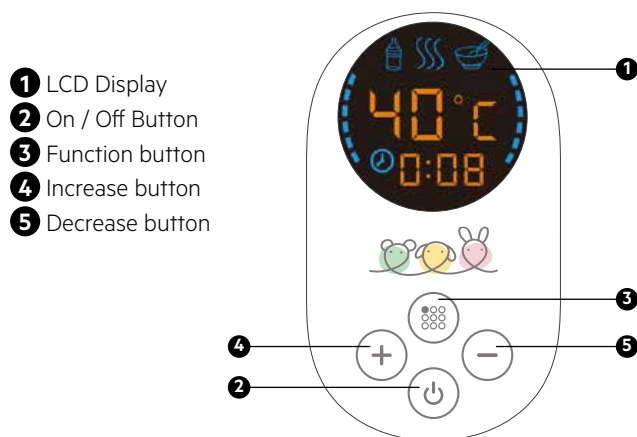

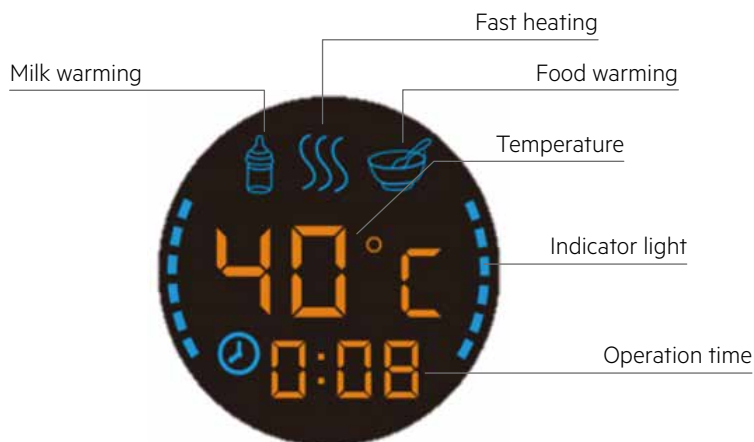


### LCD display description



# BECKEN

## Operation

### Warming milk

- Fill a measuring cup with 200 ml of water and pour it into the heating chamber.
- Place the basket for bottles inside the warmer.
- Place the appliance on a flat, stable surface, out of reach of children, and where it cannot be knocked over or moved during use.
- Make sure that the bottle basket is securely placed inside the warmer.
- Place the prepared bottle in the warmer.
- Connect the unit to the socket, you will hear the “Dee” sound. Next, press the On / Off  button, the display enters the initial state “00”.
- Press the function  button and select 40 °C milk heating. You can adjust the temperature with the + / - button by increasing or decreasing the temperature (Min. 35 °C, Max. 45 °C).
- The appliance can remain in operation for 8 hours. Thereafter, the unit will switch off automatically after emitting a “Dee-Dee-Dee” sound.
- You can touch the  On / Off button to switch the device off at any time.
- Be careful when removing the bottle as it is very hot and so is the water surrounding it.
- Shake the bottle carefully and check the temperature of the milk.

See the table below



Normal heating warmer						Data
Setting degree °C	Water °C	Water ml	Milk °C	Milk ml	Room °C	Heating time to reach 37 °C
40 °C	10±1 °C	200 ml	10±1 °C	120 ml	19 °C	34:02
	21±1 °C	200 ml	21±1 °C	120 ml	19 °C	26:50
	26±1 °C	200 ml	26±1 °C	120 ml	19.5 °C	27:15
	30±1 °C	200 ml	30±1 °C	120 ml	19.5 °C	19:15
	21±1 °C	200 ml	21±1 °C	120 ml	17.5 °C	37:58
	21±1 °C	340 ml	21±1 °C	120 ml	18 °C	35:30
	21±1 °C	200 ml	21±1 °C	150 ml	20 °C	30:28
	21±1 °C	200 ml	21±1 °C	200 ml	20 °C	42:17




**Note:** Always check the temperature of the milk by putting a few drops on the inside of your wrist before giving it to your baby.

For frozen milk or food, the warmer requires from 17 to 25 minutes for thawing. After that, please consider the table above for normal heating.

### Food warming

- Fill a measuring cup with 200 ml of water and pour it into the heating chamber.
- Put the adapter ring and basket with baby food jars and food cans inside the warmer.
- Place the appliance on a flat, stable surface, out of reach of children, and where it cannot be knocked over or moved during use.
- Ensure that the adapter ring and basket for baby food jars and food cans is securely placed inside the warmer.

# BECKEN




- Put the jar or food can in the warmer.
- Connect the unit to the socket, you will hear the “Dee” sound. Next, press the On / Off  button, the display enters the initial state “00”.
- Press the function button  and select 70 °C heating. You can adjust the temperature with the + / -, thereby increasing or decreasing the temperature (Min. 50 °C, Max. 80 °C).
- The appliance can be kept in operation for 3 hours. Thereafter, the unit will switch off automatically after emitting the “Dee-Dee-Dee” sound.
- You can press the  On / Off button to switch the unit off whenever you want.
- Be careful when removing the jar or food can, as it is very hot as is the water surrounding it.
- Stir the food and taste it with the help of a spoon to make sure it is not too hot for the baby.

Setting degree °C	Food	Initial °C	Heatingtime to reach 40 °C
70°C	80g	24°C	7 min.
70°C	120g	24°C	9 min.
80°C	80g	24°C	6 min.
80°C	120g	24°C	7.5 min.
70°C	80g	4°C	10 min.
70°C	120g	4°C	13 min.
80°C	80g	4°C	8.5 min.
80°C	120g	4°C	10.5 min.

[you can trust]

**Note:** Be careful not to overheat the food.

### Fast Heating

- Pour water into the warming chamber. Please refer to the table below.
- Place the bottle basket in the warming chamber. At the same time, you can place the Jar basket and adapter ring if needed.
- Place the appliance on a flat and stable surface, out of reach of children, and where it can't be knocked or moved during use.
- Plug the appliance to the wall socket, you will hear “Di” sound. Then touch the ON / OFF button , the display enter into “00” initial condition.
- Touch function button , choose fast heating . The appliance will stop working automatically with “Di-Di-Di” sound after finished heating.
- You can touch the ON / OFF button to stop working anytime you want.

Temperature					Heating time to reach 37 °C
Water	Water	Milk	Milk	Room	
20±1 °C	5,5 ml	20±1 °C	40 ml	20 °C	03:00
20±1 °C	7 ml	20±1 °C	80 ml	20 °C	03:29
20±1 °C	8,5 ml	20±1 °C	120 ml	20 °C	03:55
20±1 °C	9 ml	20±1 °C	150 ml	20 °C	04:18
20±1 °C	10 ml	20±1 °C	200 ml	20 °C	04:47
20±1 °C	12,5 ml	20±1 °C	250 ml	20 °C	06:50

# BECKEN

Temperature					Heating time to reach 37 °C
Water	Water	Milk	Milk	Room	
20±1 °C	9 ml	4±1 °C	40 ml	20 °C	04:05
20±1 °C	10 ml	4±1 °C	80 ml	20 °C	05:19
20±1 °C	11 ml	4±1 °C	120 ml	20 °C	05:34
20±1 °C	12 ml	4±1 °C	150 ml	20 °C	06:15
20±1 °C	16,5 ml	4±1 °C	200 ml	20 °C	08:47
20±1 °C	17,5 ml	4±1 °C	250 ml	20 °C	09:32

**Note:** Always check the milk temperature by testing some on the back of your hand before feeding.

## Precautions

- **Make sure that you have drained the water before connecting the appliance.**
- Do not touch hot surfaces.
- Keep the baby away from the appliance.
- Always check the temperature of the milk or food to make sure it is not too hot for the baby.
- Do not place the appliance on or near sources of heat, such as a gas or electric burner or a heated oven.
- Do not let the power cord hang over the edge of tables or counters, or come in contact with hot surfaces.
- Remove the plug after use.

### 2.3. Maintenance

Always switch the appliance off and unplug the power plug before proceeding with maintenance. Always allow the unit to cool before performing any maintenance operations. After use, carefully empty the remaining water inside the warmer. Wipe the base and the warmer with a damp cloth, then wipe it with a clean cloth.

Do not use cleaning products.

**Note:** All daily maintenance operations must be carried out after disconnecting the appliance from the power supply.

### 2.4. Troubleshooting

Try the following solutions in the event your appliance does not operate as expected. If the baby bottle and baby food warmer does not operate normally, contact your dealer, the store where you purchased the product or customer service.

Problem	Solution
<b>The baby bottle and baby food warmer does not switch on</b>	<ol style="list-style-type: none"><li>1. Check if the appliance is firmly plugged into the power socket, unplug it and then plug it back into the power socket.</li><li>2. Check if the power socket is supplying power.</li><li>3. Make sure the baby bottle and baby food warmer is turned on.</li></ol>

## 3. TECHNICAL SPECIFICATIONS

Power: 180 W

Power supply: 220-240 V ~ 50-60 HZ

# BECKEN

## 4. POST-SALE SERVICE

BECKEN has designed this appliance in order to guarantee maximum reliability. However, if a problem occurs do not attempt to open the appliance - there is a risk of electrical shock. If you are not able to solve the problem, please contact the Costumer Support Service of any Worten, Modelo or Continente store in order to be assisted. Worten Equipamentos para o Lar provides a 2-year warranty for manufacturing defects from the date of purchase of the appliance.

**WARNING:** Any attempt to repair the appliance without contacting the manufacturer or seller will void the warranty.

All users must be familiar with these instructions. Knowing what could go wrong can help prevent problems from occurring.

## 5. ENVIRONMENTAL PROTECTION

In order to protect the environment we strive to reduce the volume of packaging used, limiting it to three easily sorted materials: cardboard, paper and plastic. The appliance is manufactured using recyclable materials after disassembled by a specialized company. Please comply with local regulations concerning the recycling of all materials.

